

# INSTRUCTION MANUAL

## Air conditioning system



Blue Airco Srl

Via Scaruglia, 1  
16040, San Colombano Certenoli  
Genova, Italy

Telephone: +39 01851770147  
e-mail: [info@blue-airco.com](mailto:info@blue-airco.com)



## SOMMARIO

1.0 INTRODUCTION .....	01
2.0 SAFETY AND PROHIBITIONS .....	01
3.0 RESPONSIBILITY .....	02
4.0 PACKAGING AND IDENTIFICATION .....	02
5.0 UNIT DESCRIPTION .....	04
6.0 INSTALLATION .....	05
6.1. PLACEMENT OF THE UNIT .....	05
6.2. DUCTING AND GRILLES .....	06
6.3. SEAWATER CIRCUIT .....	09
6.4. CONDENSATE DRAIN .....	11
6.5. ELECTRICAL BOX .....	12
6.5.1. WIRING .....	13
6.5.2. GROUNDING .....	18
6.5.3. BONDING .....	18
6.6. TOUCH DISPLAY INSTALLATION (CONTROL PANEL) .....	18
6.7. ENVIRONMENT OPERATING CONDITIONS AND WORKING LIMITS .....	19
6.8. MAINTENANCE .....	19
6.9. GENERAL NOTICES AND SAFETY MEASURES .....	19
7.0 TOUCH SCREEN DISPLAY .....	21
7.1. MODE .....	21
7.2. FAN SPEED .....	22
7.3. TEMPERATURE SET POINT .....	22
7.4. SLEEP MODE .....	23
7.5. TIMER FUNCTION .....	23
7.6. SETTINGS .....	23
7.7. ALARMS .....	24
7.8. VERSION E (EVOLUTION) ALARMS AND TOUCH SCREEN DISPLAY 2.4", 3.5" .....	24
8.0 WARRANTY TERMS .....	29
8.1. LIMITED WARRANTY .....	29
8.2. WARRANTY DURATION: .....	30
8.3. WARRANTY CONDITIONS: .....	31
9.0 DISPOSAL AND REFRIGERANT FLUID RECOVERY .....	32



Thank you for choosing our product. The product that you have purchased has been manufactured with great care employing high quality components, materials and the best technology in order to offer you the highest performances and energy saving over the time. The product has passed all the quality and performance tests before leaving the factory.


This document is confidential by law and shall not be copied or transferred to any third party without written the authorization of the manufacturer. The manufacturer reserves the right to make changes at any time to the products and manuals without notice.

## 1.0 INTRODUCTION

This manual provides you with the explanations necessary to install correctly the product and to run it safely and efficiently. You are requested to read this instruction manual carefully before installation and first use. Keep it in a safe and reachable place and in case you pass the product to another person please transfer to him the manual as well. Should you have any doubt or wish more details please contact the authorized local distributor or contact us directly by email at: [info@blue-airco.com](mailto:info@blue-airco.com).

The installing instructions given in this manual are intended for qualified personnel used to carefully follow safety precautions and guidelines.

## 2.0 SAFETY AND PROHIBITIONS

-  Danger of electrocution: voltage supply must be disconnected at power source before removing any cover, installing or servicing the unit. The negative input of the unit must be connected to the boat negative, that is normally grounded.
- Do not install the unit in spaces where there are fuel line fittings, fuel tanks, fuel valves, fuel engines. Place a fire extinguisher close to the working area.
- Do not terminate condensate drain line close to exhaust systems (keep a min safety distance of 2 m) or in the bilge, in order to avoid harmful vapours to reach the return air of the unit and contaminate living zones. A trap should be installed in the condensate drain line to prevent the suction of carbon monoxide and any other harmful gas.
- Do not install the unit in the bilge or engine room.
- Installation and service can be hazardous because the system is under pressure (by refrigerant fluid). It is mandatory to wear safety glasses and work gloves.
- Do not pull, detach or twist the electrical cables coming from the appliance, even if it is disconnected from the main panel power supply. Attach and lay the cables in such a manner that they cannot be tripped over or damaged. Use cable ducts to run cables through walls and bulkheads with sharp edges. Do not lay loose or bent cables next to electrically conductive materials.
- Do not modify the unit, do not by-pass any safety device.
- Do not dispose, abandon or leave within the reach of children the packaging material because it can be a potential source of danger.

**Failure to comply to such rules may result in injury or death.**


### 3.0 RESPONSIBILITY

Blue-Airco S.r.l. disclaims any liability for damage to people, animals or property resulting from the incorrect installation, misuse or improper maintenance of the product, or resulting from failure to comply with the guidelines and rules given in this manual.

The manufacturer accepts no liability for damages in the following cases:

- Faulty air conditioning system assembly or connection.
- Damage to the product resulting from mechanical influences and excess Voltage.
- Alterations to the product without written permission from the manufacturer.
- Use for purposes other than those described in the operating manual.

### 4.0 PACKAGING AND IDENTIFICATION

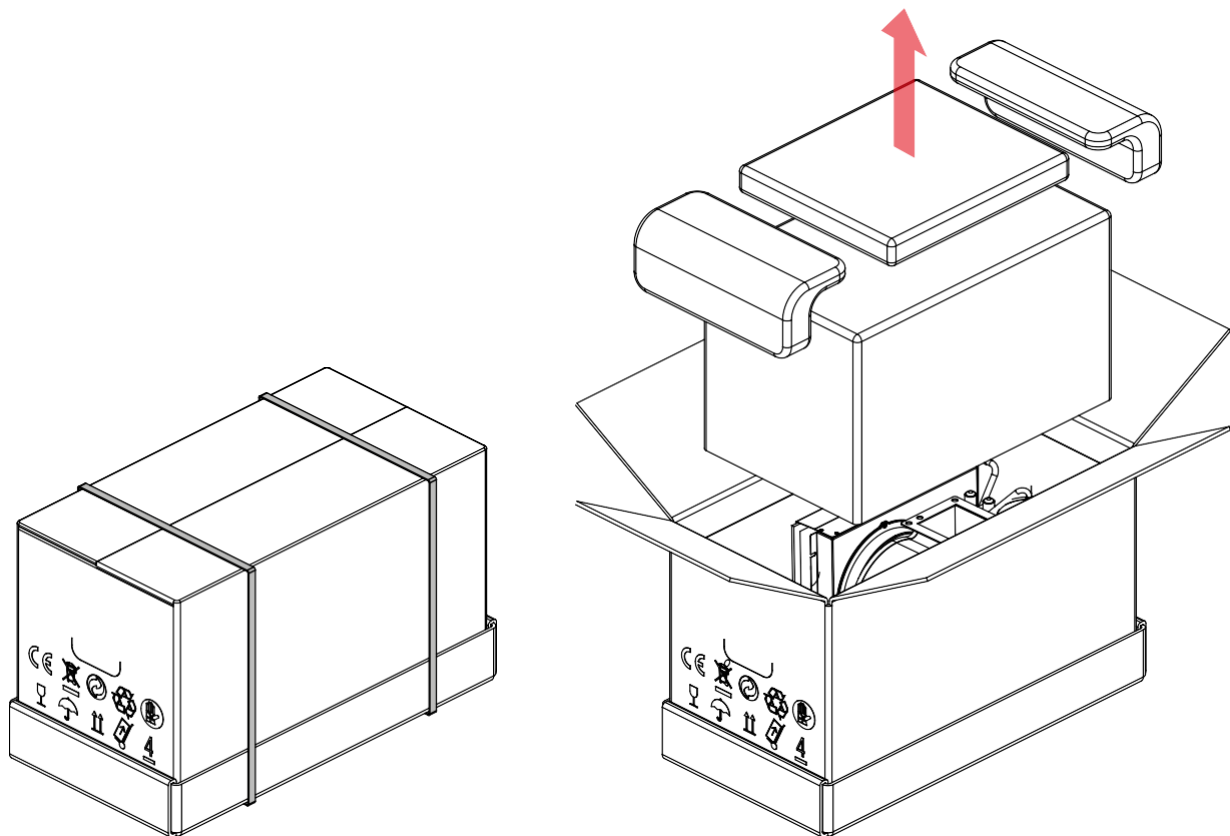

The packaging is made of suitable materials to protect the products during transport and handling. Each unit includes a touch display with cable, 4 mounting brackets, and one plastic air exit adapter with 4 screws.

For unpacking and inspection proceed as below indicated:


- Check the cardboard box for shipping damage, removing the components from the box if necessary. If the cardboard box is damaged, or the normal “up” orientation as indicated by the arrows has not been respected by the forwarder, immediately report it to the carrier, expressly indicating on the delivery note that the goods are accepted with reservation and possibly keep






photographic evidence of any damage found.

- Unpack and check that all the components have been received.
- Check that all the components have not been damaged during transport.
- If the unit is damaged, the forwarder shall make the proper notation on the delivery receipt acknowledging the damage.

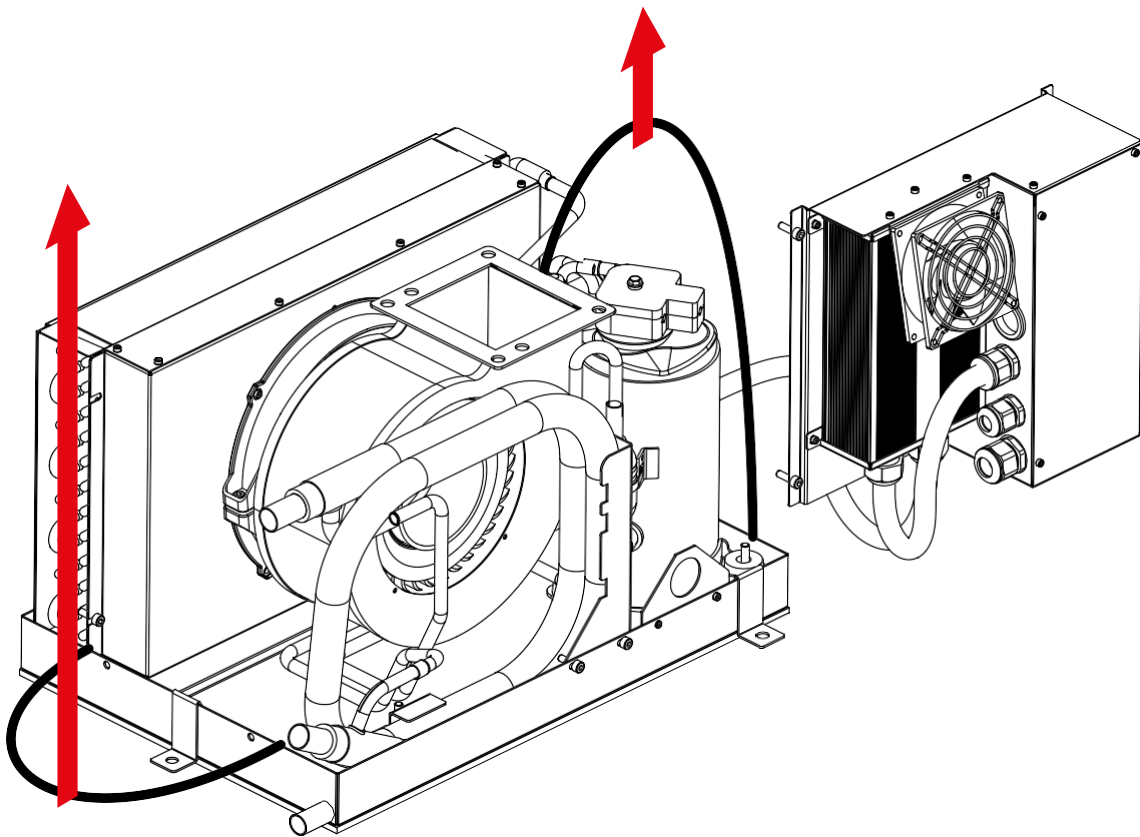**IMPORTANT!** Lift the unit exclusively by means of the dedicated rope handles, avoiding to grab it from tubing and any other component. Keep the unit always in the normal “up” orientation, during the transport and installation, in fact the compressor must remain always upright to avoid tubing deformation and oil migration.



Each product is identified by a label as below indicated:


		<b>BLUE-AIRCO</b> 		www.blue-airco.com		
				MADE IN ITALY		
<b>SELF CONTAINED UNIT VARIABLE SPEED 8000 BTU/h 12VDC</b>						
Model: <b>SDC08V12</b>		Serial Number: <b>B1SDC00001</b>				
Voltage: <b>12 VDC</b>		Max input power: <b>540 W</b>		Max current: <b>45 A</b>		
Max sea water flow: <b>1,2 m3/h</b>		Min sea water flow: <b>0,8 m3/h</b>		Refrigerant R410A: <b>250 gr</b>		

Contains fluorinated greenhouse gases covered by the Kyoto protocol

## 5.0 UNIT DESCRIPTION

The unit is a seawater cooled marine air conditioner designed to run at the specified low voltage: 12 VDC or 24 VDC, or 48 VDC depending on the model. It consists of the following components:

1. Condensate drain (two locations shown)
2. Mounting brackets
3. Stainless steel base (drain pan)
4. Air return filter
5. Titanium condenser coil
6. Rotary BLDC compressor
7. Fan air exit (flange for round adapters)
8. Rotatable blower assembly with BLDC fan motor
9. Finned evaporator
10. Capacitive Touch Display
11. Driver board
12. Main MCU PCB
13. Reversing valve (4-way)
14. EEV (electronic expansion valve)

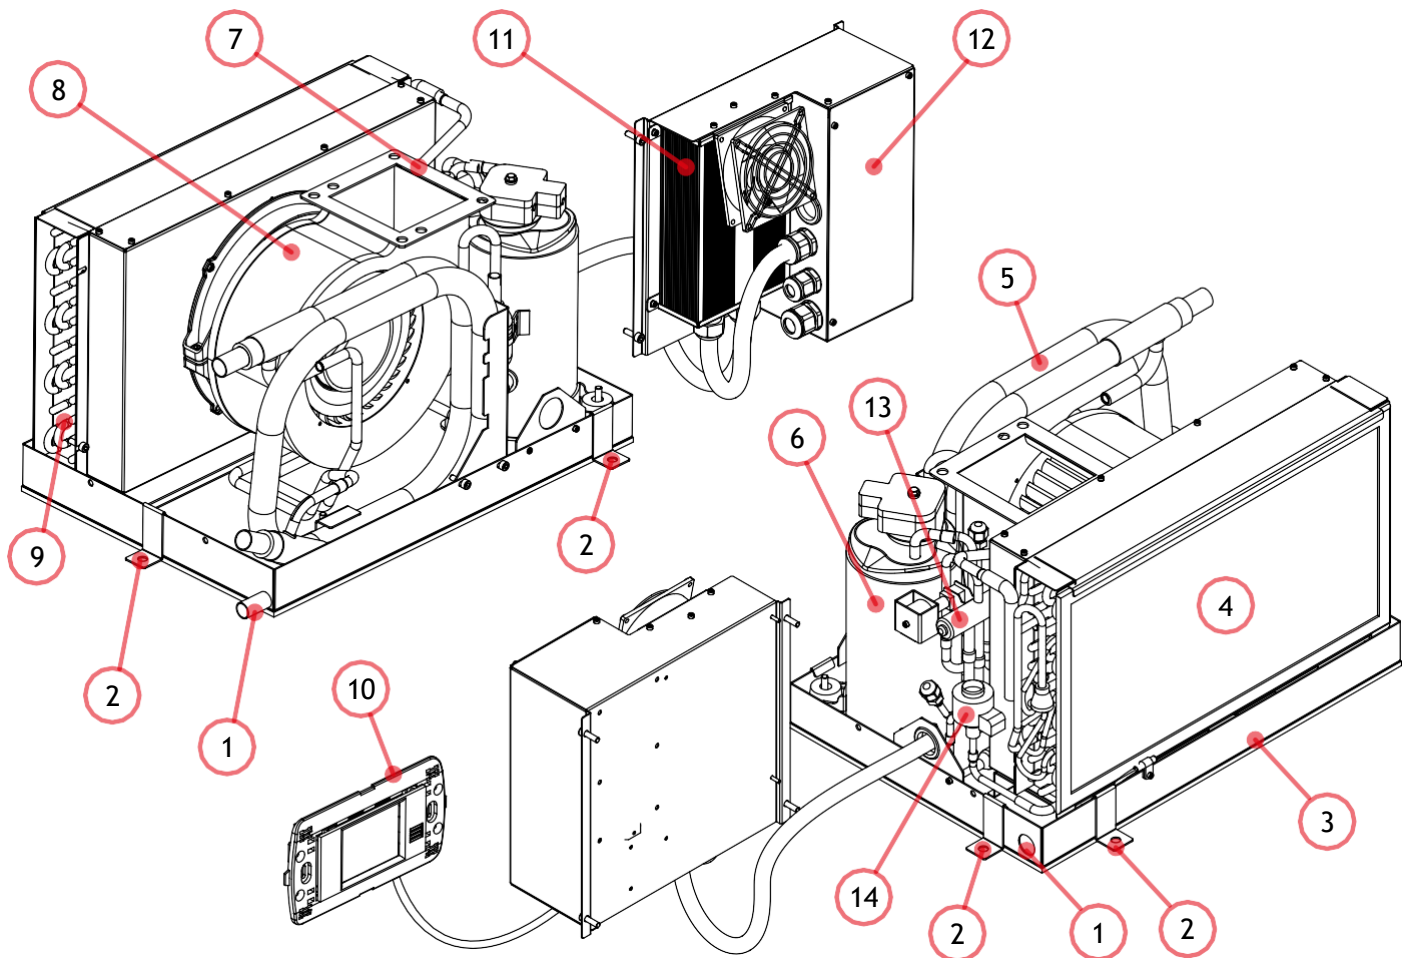

## 6.0 INSTALLATION

This product has been specifically designed for yachts and boats air-conditioning. It is suitable to cool down or warm up the interior of the vessel. Other uses are not admitted unless expressly authorized by the manufacturer.

**IMPORTANT! The installation must be carried out by qualified personnel only, complying with the instructions given in this manual and with the rules of good technique and legislation in force. The selection of the components for the complete air-conditioning system is under the installer's responsibility.**


The failure to apply the rules indicated will void the guarantee and the manufacturer will not be liable for any damage caused to people, animals or things.

### 6.1. PLACEMENT OF THE UNIT

The installation of the air conditioning system on board must be carefully planned before starting the installation. In particular the following connections must be taken into account:

- Electrical box of the unit.
- Electrical power connections.
- Control panel.
- Air ducts and grilles and any other accessory for the air distribution.
- Condensate drain.
- Seawater pump.
- Seawater circuit (speed scoop, sweater intake, shut-off valve, strainer, pump, unit coil inlet and outlet, overboard discharge).

1. Supply air grille and transition box
2. Digital display
3. Electrical box
4. Seawater outlet hose
5. Overboard discharge
6. Seawater inlet hose
7. Seawater scoop thru-hull inlet
8. Seacock shut-off valve
9. Seawater strainer
10. Pump
11. Mounting bracket
12. Return air grille and filter
13. Insulated flexible ducting

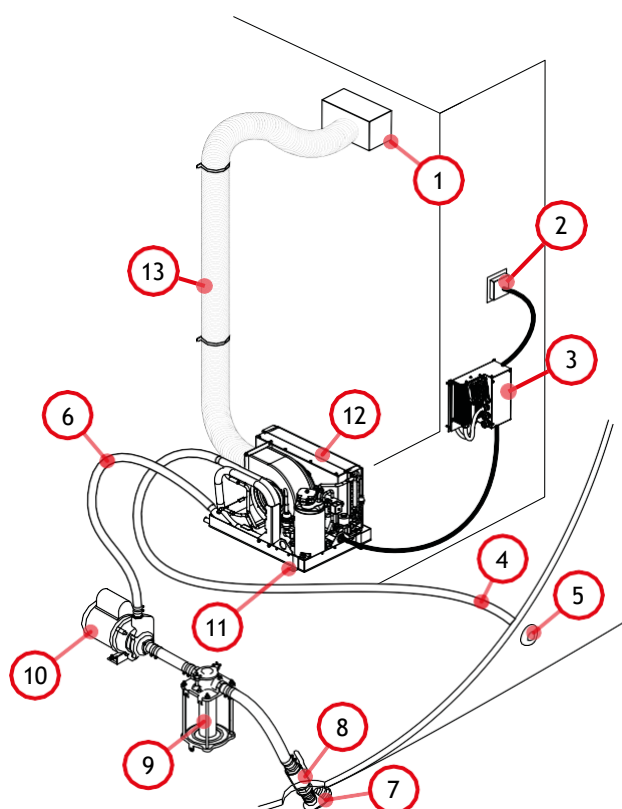




When installing the unit the following space margins should be considered:

- Allow at least 150 mm clearance around the unit in the area of the seawater and condensate drain pipe.
- Allow at least 100 mm of air space in front of the air filter (on the finned evaporator) for the return-air intake.
- For flexible insulated ducts on supply air section consider to add 50 mm clearance for the duct ring and 25 mm for the duct bend radius and duct diameters.
- Allow at least 150 mm clearance around the electrical box.
- Allocate enough space for installation, maintenance and service.

The unit, as well as its electrical box and the pump must be installed in dry and ventilated places where the **MAXIMUM AMBIENT TEMPERATURE** does not overcome 40°C (104°F).

- Attach the air conditioner unit to a solid level platform with the four mounting brackets provided.
- The air conditioning unit should be installed in the lowest possible location, but never in the bilge or engine room or any other area not totally sealed from the bilge or engine room.

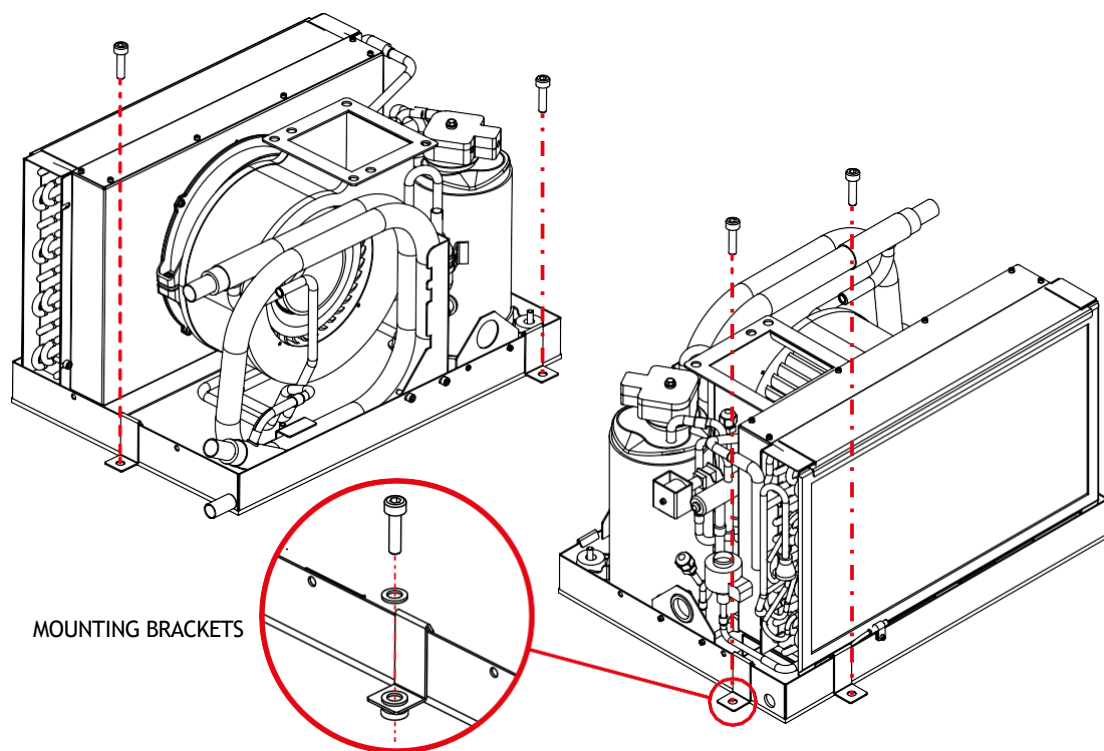


## 6.2. DUCTING AND GRILLES

The blower is rotatable by 135 degrees, to ease installation and improve air flow. Rotate the blower to allow the most direct flow of air to the supply-air grille:

- Loosen the adjustment screw.
- Rotate the blower.
- Tighten the adjustment screw.



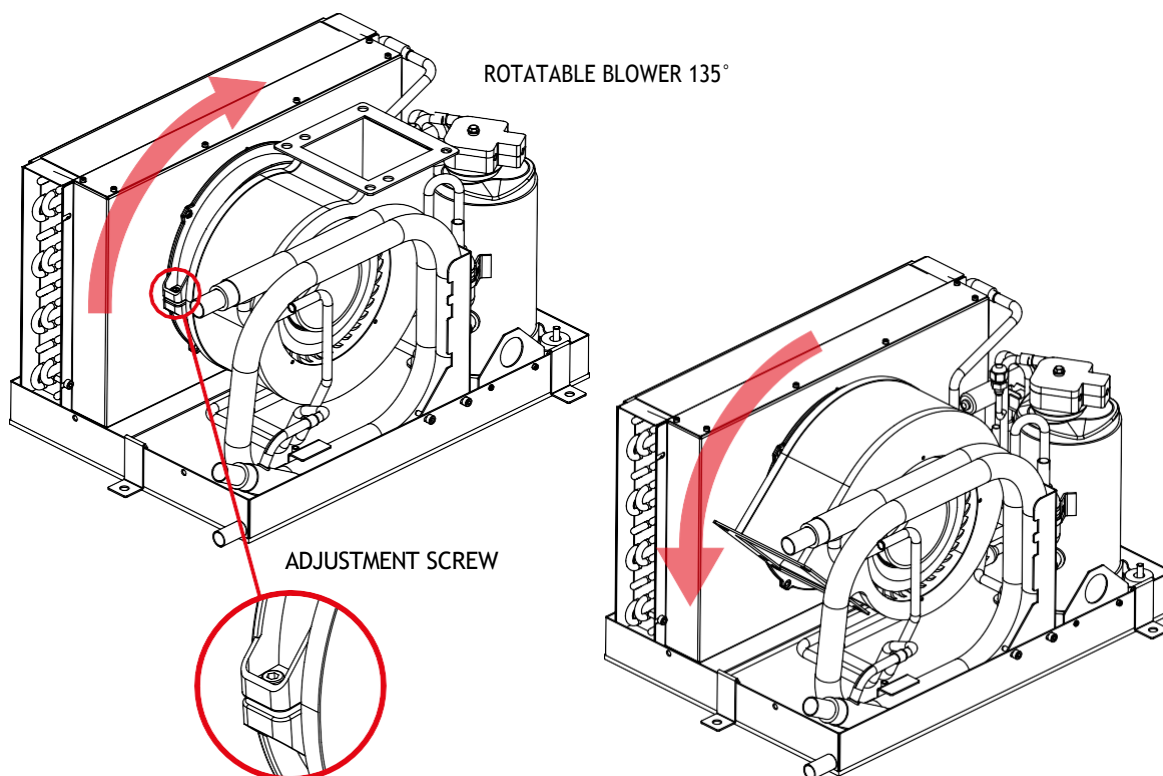

## RECOMMENDED DIMENSIONS FOR AIR GRILL AND DUCTS

kBTU/h	5	8	10	12	16	18
Duct Diameter [in/cm]	4/10.6	5/12.7	5/12.7	6/15.2	6/15.2	6/15.2
Duct Area [sq.in/sq.cm]	12.6/81	19.6/126	19.6/126	28/181	28/181	28/181
Return air grille, free area [sq.in/sq.cm]	70/450	78/500	86/550	93/600	134/866	155/1000
Supply air grille, free area [sq.in/sq.cm]	40/260	46/300	50/320	75/480	81/520	109/700
Min clearance in front of the return grille [in/cm]	4/10	4/11	5/12	5/13	6/14	6/15

## GRILLES

- Supply-air grille shall be installed as high as possible, avoiding direct flow towards the persons. Also avoid that air from supply grille is directed towards the return-air grille (short cycle).
- A minimum clearance of 230 mm is required behind the supply-air grille to connect the duct.



- The return-air grille shall be installed as low as possible and very close to the unit.
- Install the return-air grille away from exhaust and bilge vapours.
- A minimum clearance of 110 mm is required in front of the return-air grille in the cabin area.

## AIR DUCTS CONNECTION


**IMPORTANT!** The diameter of the duct should not be less than the diameter of the outlet nozzle

- SELF-CONTAINED SDC08V12 (up to 8.000 BTU/h) ducts diameter 120 mm / 152 mm
- SELF-CONTAINED SDC12V12 (up to 12.000 BTU/h) ducts diameter 120 mm / 152 mm
- SELF-CONTAINED SDC10V48 (up to 10.000 BTU/h) ducts diameter 120 mm / 152 mm
- SELF-CONTAINED SDC18V48 (up to 18.000 BTU/h) ducts diameter 152 mm

If the duct length overcomes 3 m it is recommended to use bigger duct diameter.


### **120 mm / 150 mm flange adapters (optional)**

The ring adapter (with external diameter 120mm) shall be fixed directly to the fan outlet flange. If employing Ø152mm duct, after installing the Ø120mm ring adapter, an additional oval adapter (oval shape) shall be fixed on it by a metal clamp. In this case the smaller axes of the oval shape shall be kept horizontal thus permitting to rotate the fan.


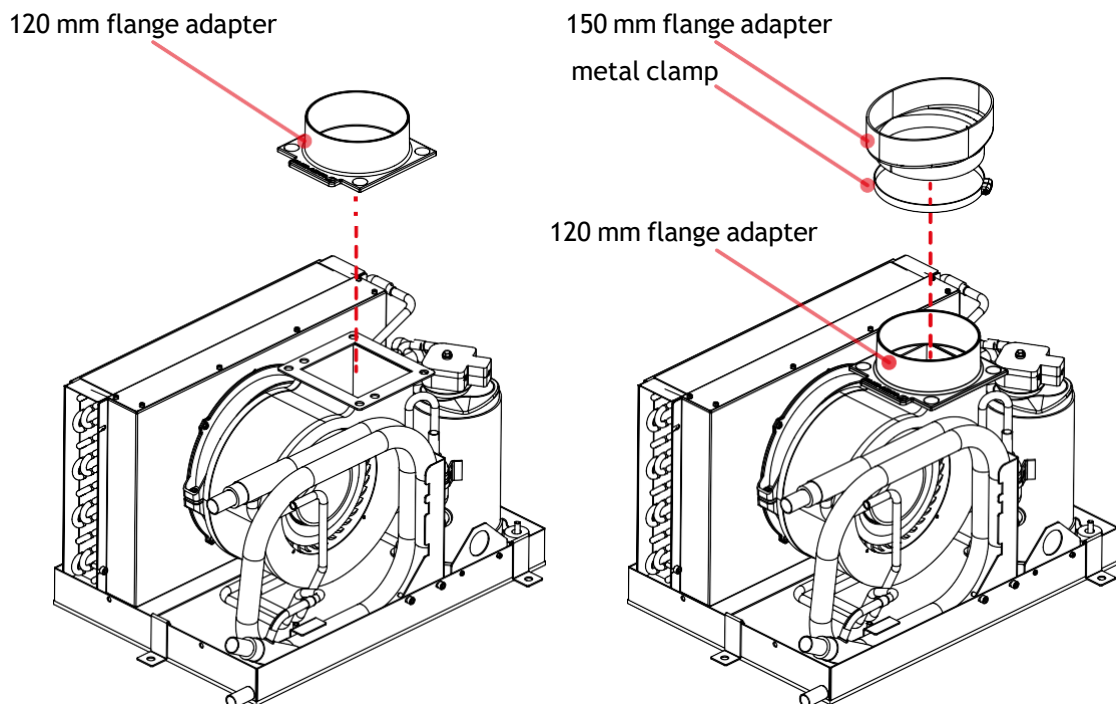


- The ducting should be placed as straight, smooth and stretched as possible.
- Avoid as much as possible bends and loops, considering the possibility to rotate the fan.
- Minimize the number of 90° bends in order to minimize air pressure losses and airflow rate decreasing (e.g. 2 bends 90° on a duct may cause 25% air flow reduction)
- Ensure the ducting is properly connected with no excess. Eliminate any air leaks from the connecting zones by wrapping duct tape all around.
- Ensure that ducts are correctly insulated preventing condensate.



### 6.3. SEAWATER CIRCUIT

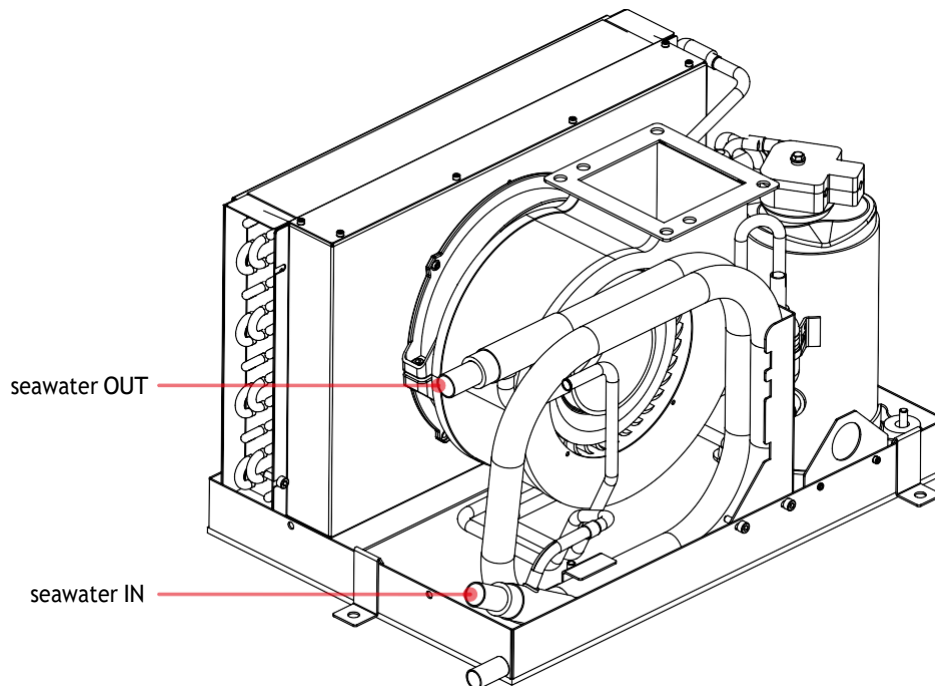

The seawater flow must go steadily upwards from the seawater intake, through the strainer, through the pump up to the unit (seawater IN) avoiding any high spot where the air could be trapped. The seawater pump must be placed below the seawater line and its head correctly oriented as below:

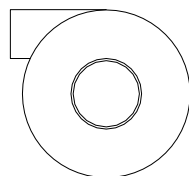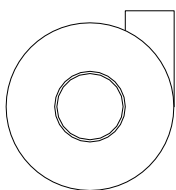

CORRECT ORIENTATION OF PUMP HEAD

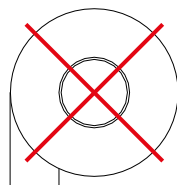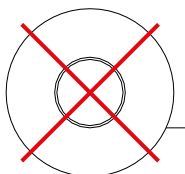


INCORRECT ORIENTATION OF PUMP HEAD

The strainer must be placed below the pump. The seawater intake shall be provided with a speed scoop and ball valve connected to the through-hull fitting.


The hoses must be double clamped with reversed clamps and must be placed carefully uphill from the through-hull fitting to the unit, avoiding loops, tight bends and crushing.

## CORRECT INSTALLATION

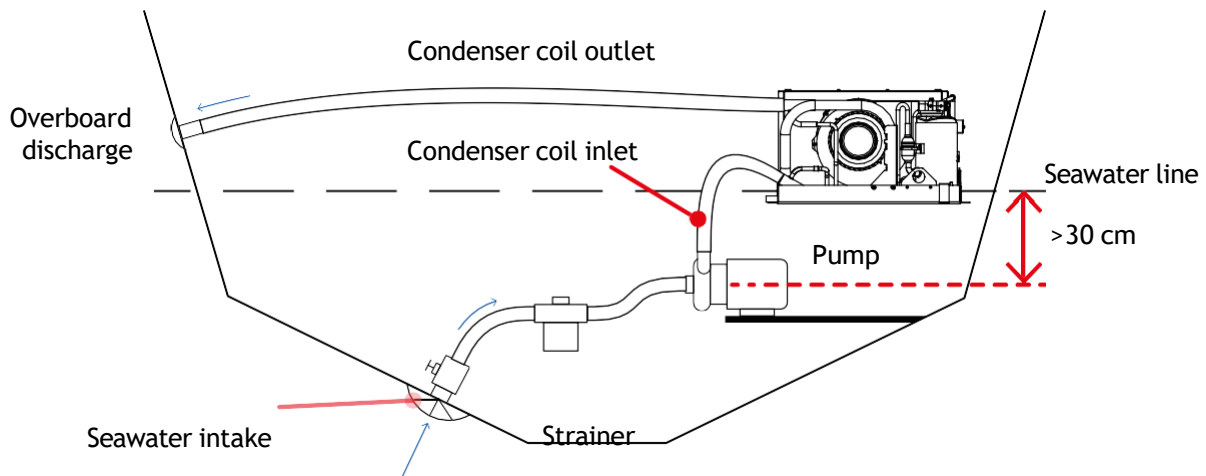


## EXAMPLE OF INCORRECT INSTALLATIONS

Air traps between seawater intake and strainer and between the strainer and the pump.

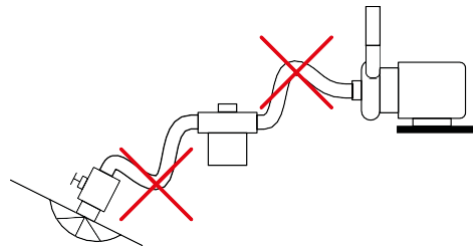

Air trap due to the strainer placed above the pump and above the water line.

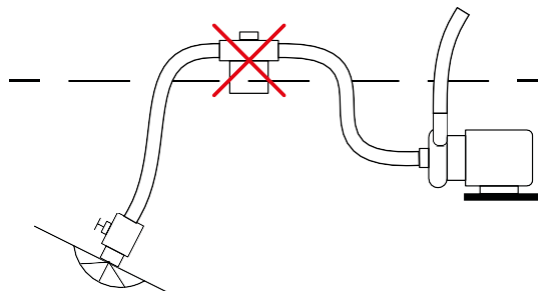

### Important notes:

- The seawater pump must be placed at least 300 mm below the water line.
- The pump must always be protected from any foreign matter by a seawater filter (strainer) which must be often checked and cleaned if necessary.  
The failure to install a strainer before the pump inlet will void the pump warranty.
- The seawater pump may be installed horizontally or vertically as long as the correct orientation of the pump head is respected, as shown on the above picture.
- Ensure the seawater is flowing freely from overboard discharge while the pump is running. The unit overboard discharge must be installed as close as possible to the waterline to reduce noise and making it possible to visually check the seawater flow.
- Connect all metallic parts in contact with seawater to the vessel's bonding system.



## **WARNING:**


- Do not tighten the threaded connections too much, otherwise cracks may form within hours or days.
- Turn off the air conditioning always when the sea is very rough in order to avoid losing pump priming.


## **6.4. CONDENSATE DRAIN**

The air treatment involves dehumidification causing the separation of water from the wet air. Such condensate collecting in the drain pan must be properly evacuated.


Do not discharge the condensate to the bilge, but run instead the drain line downward from the self-contained unit to a suitable drain location. Such drain location must be totally safe, considering that the drain pipe could suck in vapours from there to any occupied areas of the vessel. The drain hose should have a trap.

Each self-contained unit is equipped with one stainless steel smooth drain welded to the pan at the base level permitting to connect the drain line and fully evacuate the condensing water. Eventually there is pre-cut hole in the opposite side of the drain pan that could be used to connect an alternative or additional drain. Such pre-cut hole is located a few millimetres over the base and, in case it has been decided to evacuate the condensate from here, a proper plastic hose barb (accessory not supplied, available upon request) should be connected after having removed the pre-cut sheet. Screw the hose barb into the drain hole and tighten it.

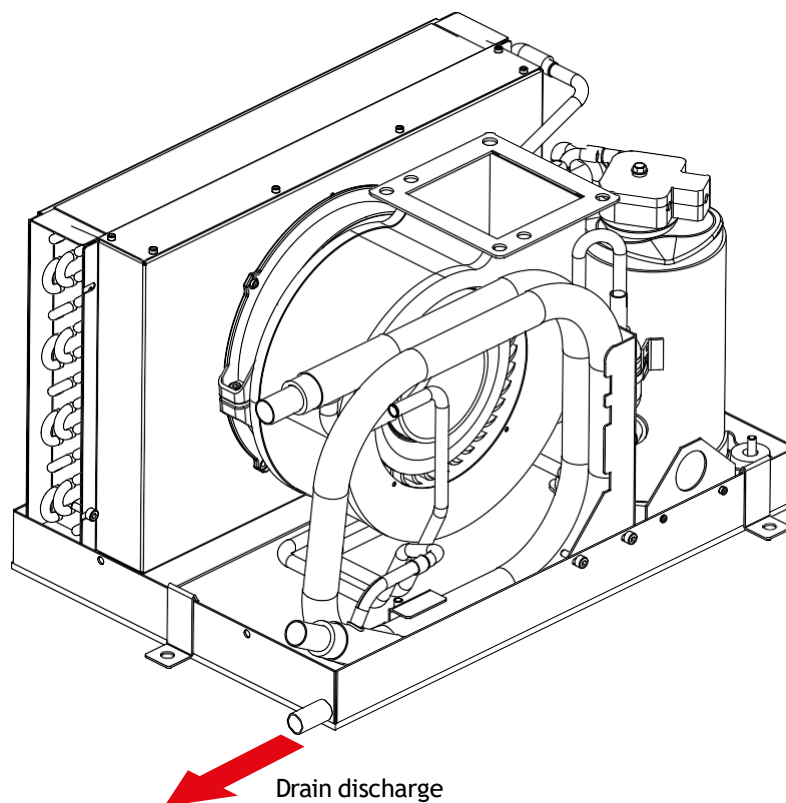


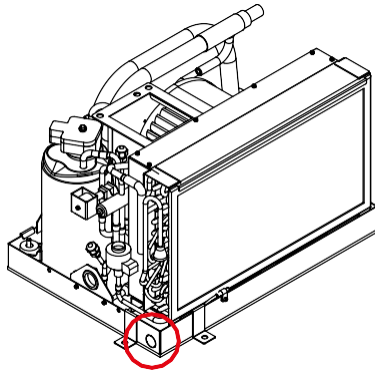


1 PRE-CUT REMOVAL

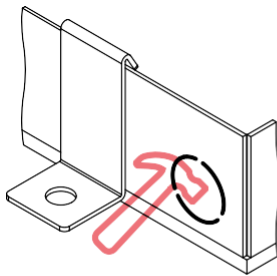

2 CONNECT HOSE BARB

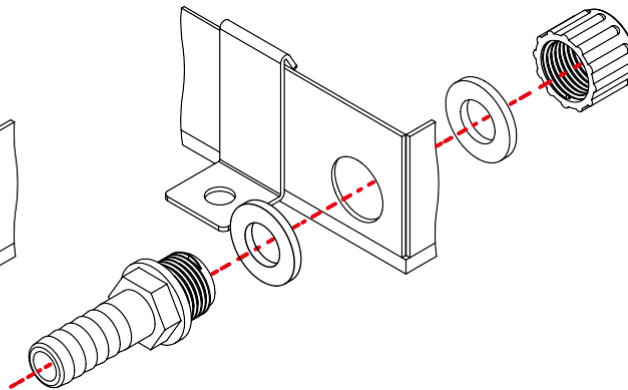

3 CONNECT DRAIN

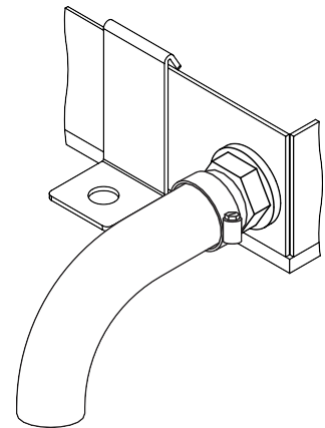

Secure the drain hose with a stainless-steel hose clamp

Test the installation by pouring one litre of water into the base pan and checking the water flow out.


## WARNING

- Do **not** terminate the condensate drain line in the engine room or within 1 m of any outlet of engine or genset exhaust.
- Do not terminate the drain line in the bilge unless the collection point is completely sealed and equipped with a sump pump.
- Failure to comply to such rules may allow bilge or engine room harmful vapours to mix with the air conditioners return-air and contaminate living areas which could cause injury or death.
- Do not tighten the threaded connections too much, otherwise cracks may form within hours or days.


## 6.5. ELECTRICAL BOX

The following rules must be respected for installing electrical box.



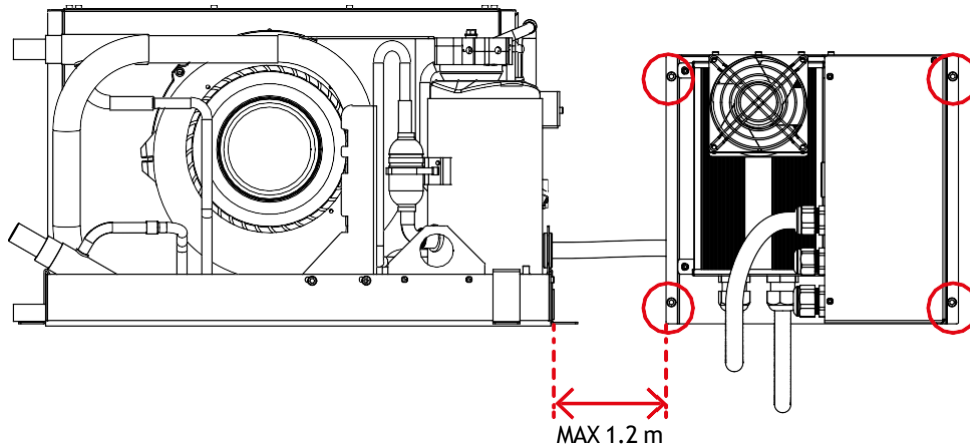

ELECTRICAL BOX WALL MOUNTING

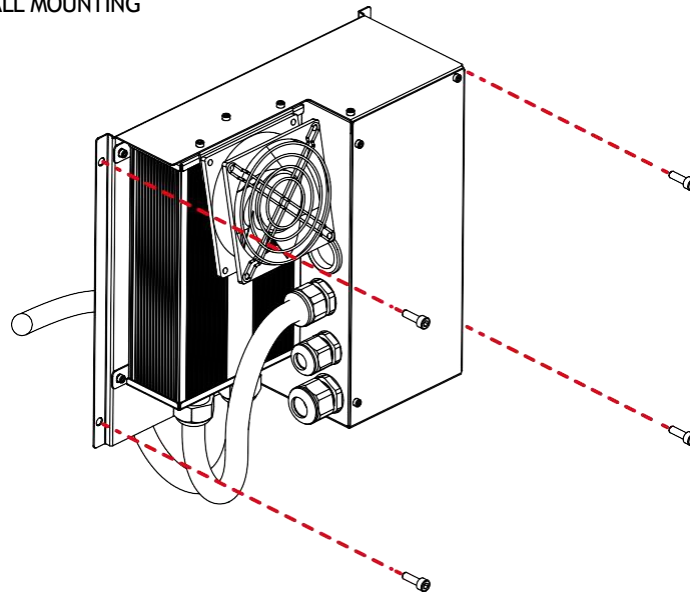

- Install the electrical box in a dry and ventilated location where the environmental temperature does not exceed 40°C (104 °F).
- Fix the electrical box to a flat, solid surface within 1 m distant from the unit and within 6 m distant from the location where the touch display will be installed.
- Use the 4 mounting holes in the back of the electric box to fix it to a suitable surface by means of screws (not supplied).
- The electrical cables responsible for transmitting power from the battery to the unit must be appropriately sized in terms of both length and cross-sectional area, conforming to the maximum current draw, and kept isolated from other cables. The cable insulation shall be designed to prevent the accumulation of heat generated by the Joule effect and permit the efficient dissipation of heat, preventing any potential issues related to overheating. It is recommended to have dedicated batteries solely for the air-conditioning system.

## 6.5.1. WIRING

### Electrical Protection Requirements

Important: To ensure the safety and longevity of your DC air conditioning units and DC pumps, it is crucial to protect these devices with appropriate electrical protection mechanisms.

## High Current Breakers:

- DC air conditioning units and DC pumps should be installed with high current breakers. These breakers are designed to prevent electrical overloads by interrupting the flow of electricity if the current exceeds a safe level.
- The current rating of the breaker should match the specifications provided in the technical documentation of the respective DC device.
- Regularly inspect the breakers to ensure they are functioning correctly and replace them immediately if any signs of wear or damage are observed.

## Fuses:


- Alternatively, fuses can be used as circuit protection. Ensure the fuse ratings correspond to the power requirements of the DC air conditioning units and pumps.
- Fuses must be checked periodically and replaced as needed to maintain optimal protection.

By following these safety instructions and using appropriate protective devices, you can help ensure the reliable and safe operation of your DC air conditioning units and DC pumps. Always refer to the product-specific manuals for detailed technical specifications and additional safety information.

The PC terminals represent the PUMP dry contact and must be used exclusively to give the signal to the pump relay which supplies the voltage to the pump. The pump must be powered through a suitable device (relay, PCB, etc) receiving the signal open/close from the low power circuit PC.


**PC contact must not be used as a switch to power directly the pump otherwise the main control PCB will be damaged, voiding the warranty.**

A) General wiring schematic for a single air conditioning unit with one pump.

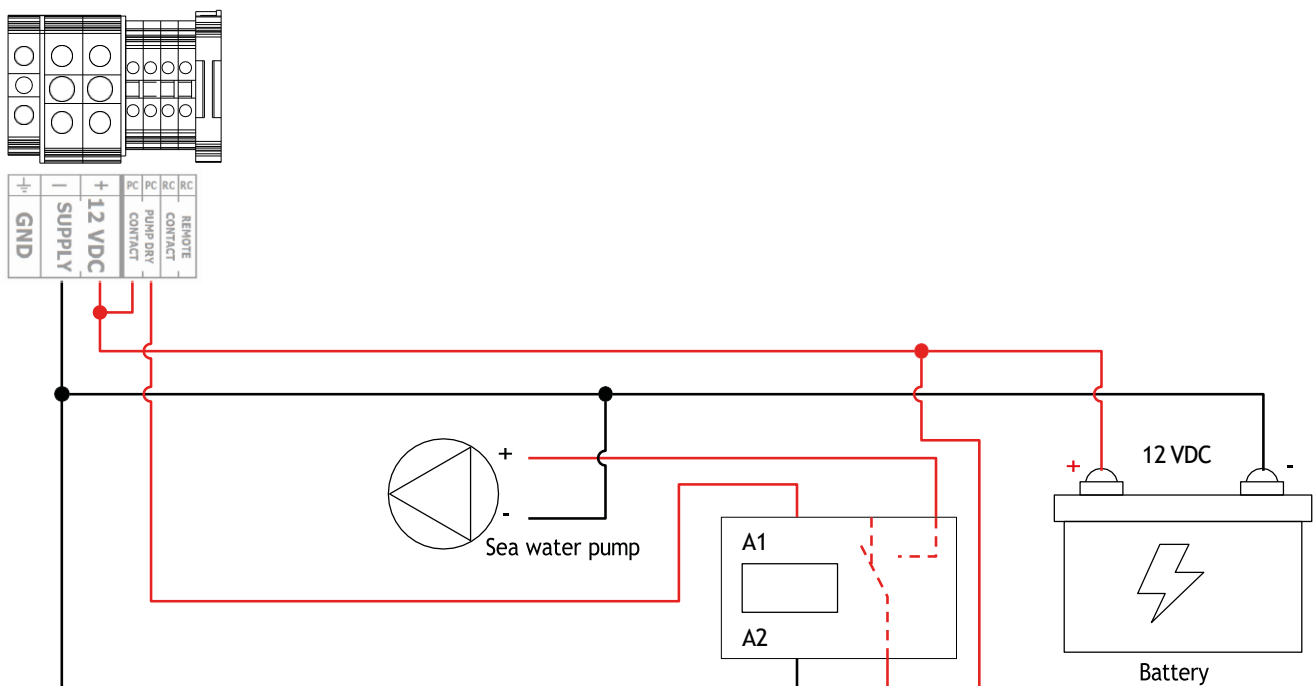


The wiring diagram is valid also for 24VDC and 48VDC voltage.


B) General wiring schematic for multiple air conditioning units (up to 4) using a single pump and the Blue-Airco pump control box (item GEN001BXROP)

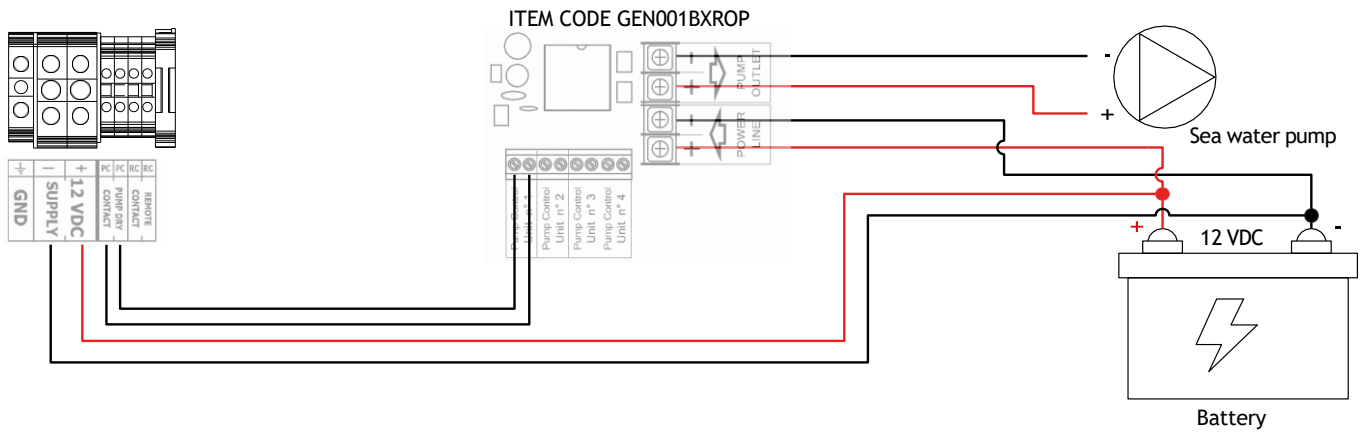

C) Wiring Schematic - pump control box with DC 12V relay and potentiometer for a single self-contained unit.

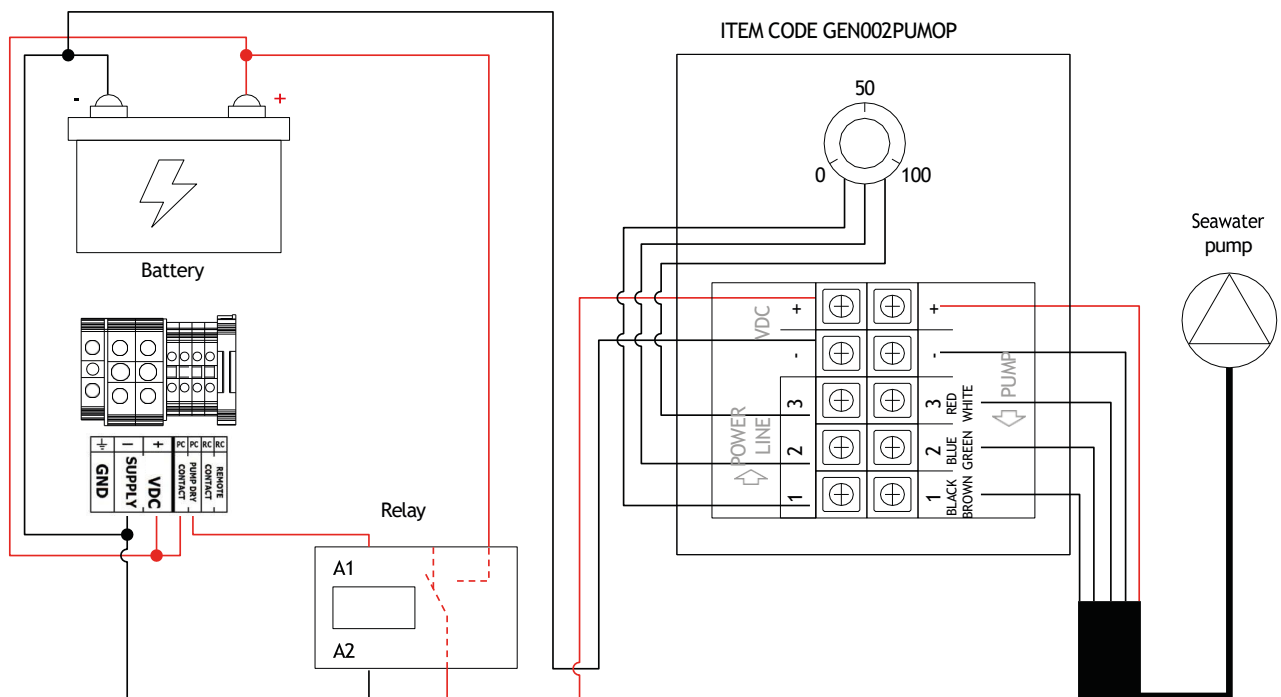


#### D) Wiring Schematic - pump control box with DC 12V relay and potentiometer for a single self-contained unit. Item code GEN001BRPOP12V

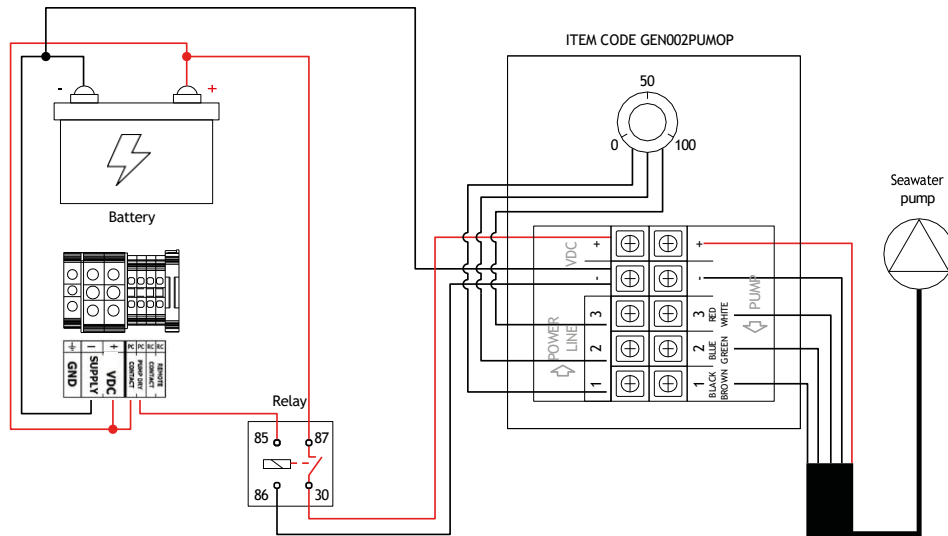


- Relay terminal 85 shall be connected to one of the PC terminals (pump control, dry contacts) on the self-contained unit terminal board.
- The other PC terminal on the self-contained unit shall be connected to the battery positive (+) line.
- Relay terminal 87 shall be connected to the battery positive (+) line.
- The pump cable (3 control wires plus positive [+] and negative [-]) shall be connected to the lower terminals of the potentiometer's terminal board.
- The negative [-] terminal on the upper side of the potentiometer's terminal board shall be connected to the battery negative (-) line.

#### E) Wiring schematic for multiple air conditioning units (up to 4) using a single pump with potentiometer (item GEN002PUMOP) and the pump control box (item GEN001BXROP)

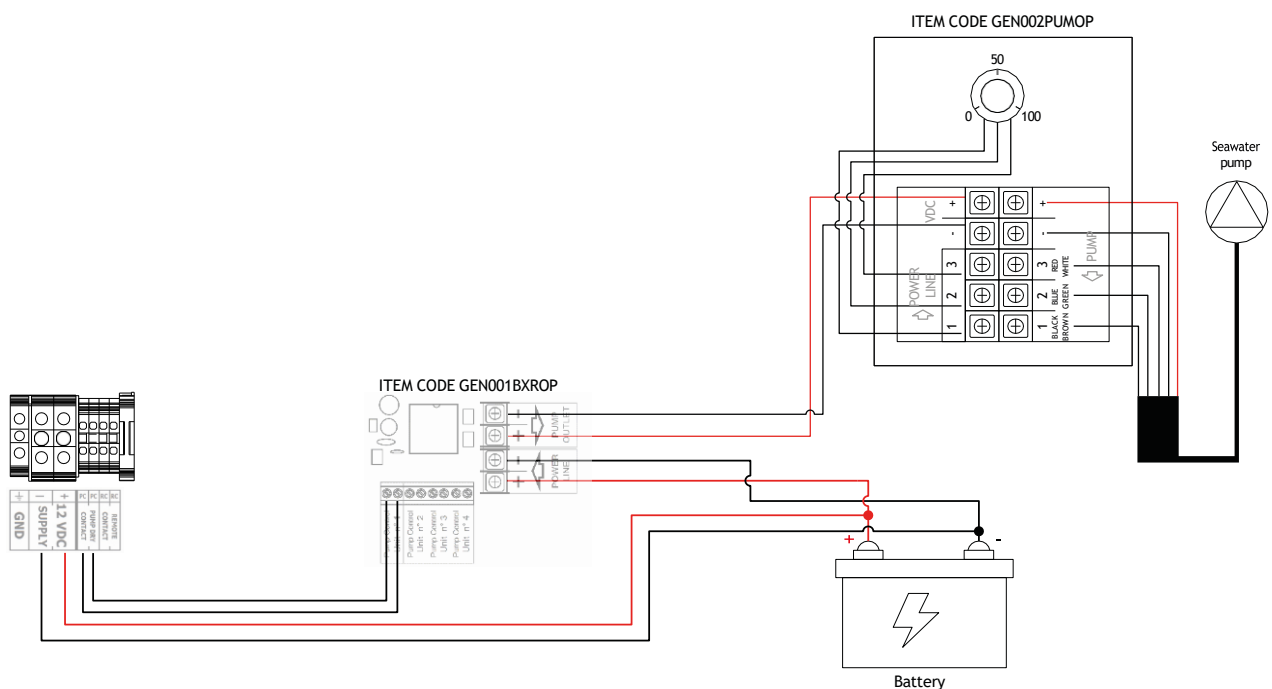

F) Wiring schematic for multiple air-conditioning units with a dual pump system, where only one pump operates at a time and is selectable via a 1-2 selector switch

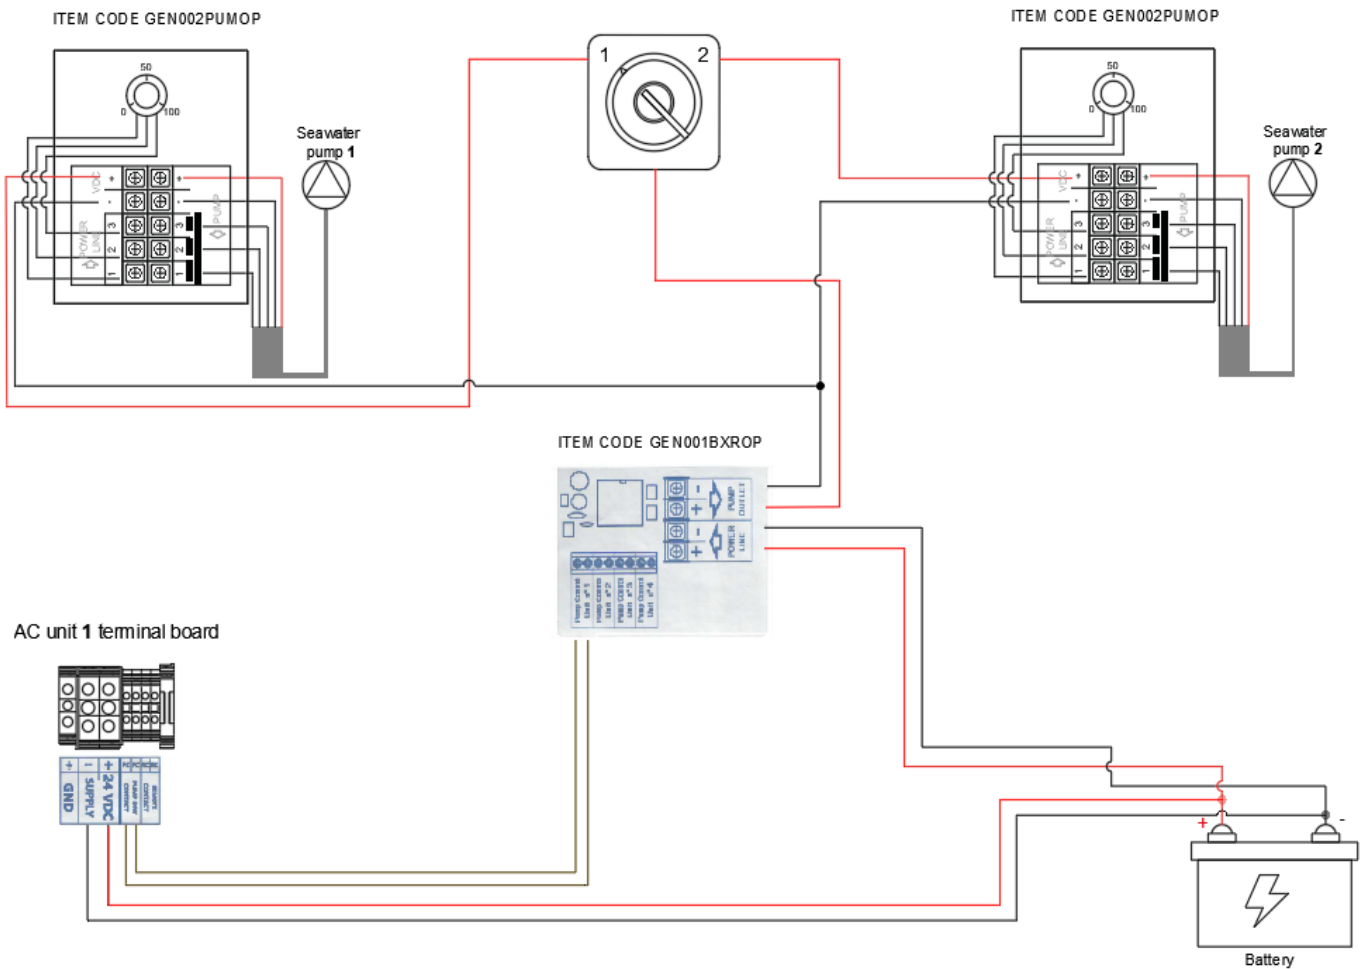

This schematic also includes a potentiometer for speed control for each pump, though it may not be necessary

### 6.5.2. GROUNDING

It is mandatory to connect the GND cable to the self-contained unit terminal board. The DC grounding conductor shall be same size as the one required for current-carrying conductors supplying the device.

### 6.5.3. BONDING

Connect all metallic parts in contact with seawater to the vessel's bonding system, in accordance with ABYC standards.


## 6.6. TOUCH DISPLAY INSTALLATION (CONTROL PANEL)

Mind the following notes on the installation of the touch display (control panel)

- Consider the max distance 6 m from the display to the electrical box.
- The display is equipped with an internal temperature probe sensing the ambient temperature; therefore, it should be installed in a proper location inside the cabin, possibly at mid-height, permitting to sense the average temperature.
- Do not install the display close to any heat source that could affect the temperature sensor reading.
- Do not install the display in direct air stream from the supply grille.
- Do not install the display in direct solar radiation.

Plug the free end of the display cable (6-pin RJ-45 connector) into the display socket J1 located in the back of the control panel.

The display is supplied mounted on Bticino LN4704 support compliant with built-in wall box 504 and aesthetic covers Bticino. Upon request the display can be also supplied mounted on Vimar support.

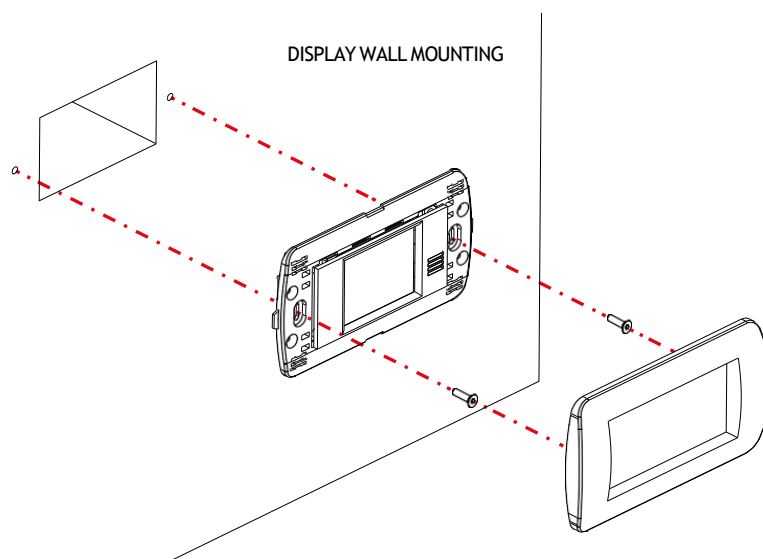



## 6.7. ENVIRONMENT OPERATING CONDITIONS AND WORKING LIMITS


Maximum ambient temperature: 40°C (104°F).

Minimum seawater temperature in winter (heating mode): 2 °C (36°F)

Maximum seawater temperature in summer (cooling mode): 45 °C (113°F)

## 6.8. MAINTENANCE

- Remove and clean the air-return filter at least once a month.

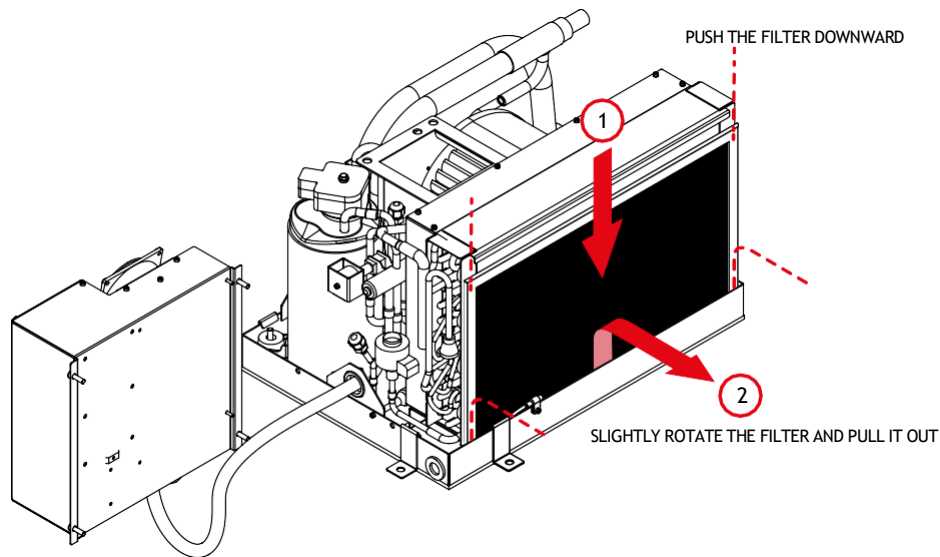

- Check all the seawater connections against leakages.
- Check every 2-3 months that condensate drains are not clogged, by pouring half a litre of water in the condensate pan: water should be evacuated in a few seconds.
- Check daily the seawater strainer and clean it if necessary.
- Check visually the seawater flow from the overboard discharge.
- Winterization: close the seawater intake and drain the water from the unit, pump and strainer.
- Clean the seawater coil (descaling) using products.
- In case of replacement of parts, use only original ones from authorized service dealers.

## 6.9. GENERAL NOTICES AND SAFETY MEASURES

- You should always use personal protective elements to perform actions on the devices.
- The installation and maintenance of air conditioning equipment may be hazardous due to pressurized refrigerant fluid and electrical parts. Therefore, the installation, system start-up and maintenance and repair must be carried out by authorized and qualified personnel only.
- In case of leakage of refrigerant fluid, it is mandatory to ventilate the room, considering also that refrigerant fluid when exposed to flame produces toxic gases. Call qualified technician for repair.
- In the case of water leakage from the seawater circuit, switch off immediately the compressor



and the seawater pump and shut off the manual valves in order to stop the seawater flow. Some parts of the appliance produce heat during operation. The place of installation must be provided with adequate fresh air ventilation.

- It is forbidden to disperse R-410A into atmosphere: R410A is a fluorinated greenhouse gas, referred to in the Kyoto's Protocol, with a Global Warming Potential (GWP) = 1975.

## **WARNING**


Before you start up the boat, check carefully for any water leakage from the air-conditioning system, in case of any doubt contact a qualified ship's technician. Otherwise, there is a danger of the boat sinking, that can result in injury or death.

**RC:** contact for compressor activation from remote, when the contact is closed the unit works normally and can be managed via the touch display, when the contact is open the unit stops (stand-by mode) and it cannot be activated from the display, SB is shown on the display to indicate this state.

**Important:** in case of connecting two or more units in parallel the RC digital inputs of each unit must be kept separated.



## 7.0 TOUCH SCREEN DISPLAY:

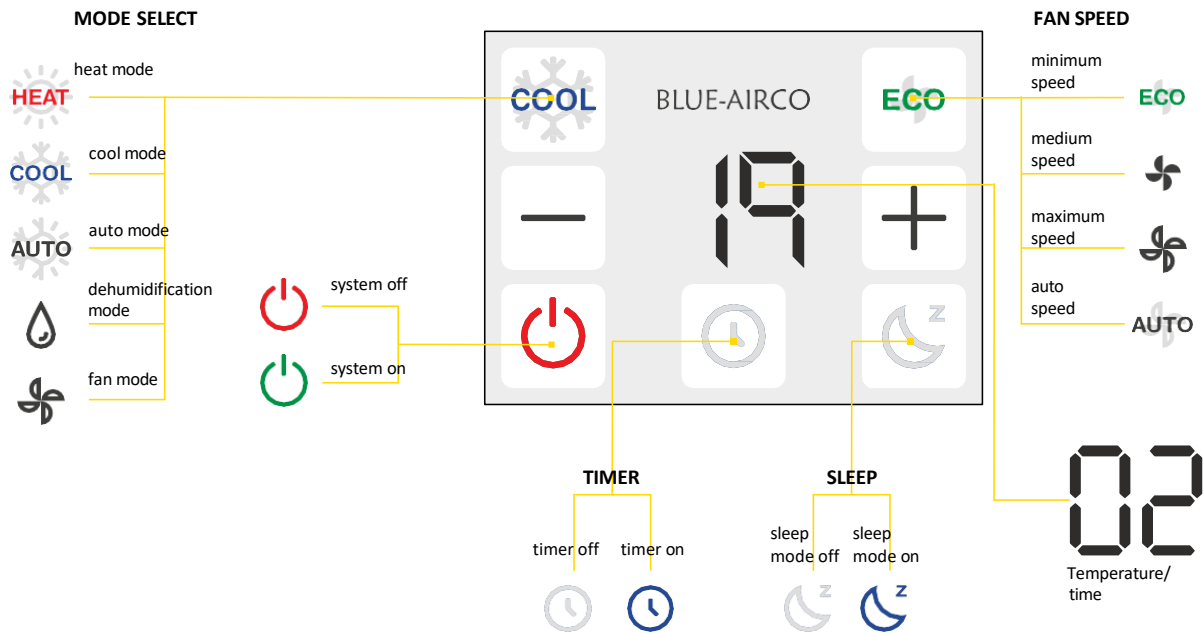

When the unit is powered, independently if the compressor is running or in stand-by, the back light of the display will be activated only by touching the screen.

The ON/OFF button located in the low left corner of the display permits to start and stop the air conditioner, it is suggested to set the unit (mode, fan speed, set point temperature, etc) before starting the unit. The last setting will be maintained after powering OFF and ON again the unit. Note that any alarm activation will be shown on the display after touching it.

### 7.1. MODE

Mode button permits to select cooling / heating / dehumidifying / AUTO.

Additional function of the Mode button: with the unit OFF (stand-by), by pressing and holding 10 s the MODE button, the pump output will be activated, and the following icon will be displayed:



This function is useful during the installation in order to prime the pump and fill the sweater circuit before starting the compressor. By pressing again the MODE button, the pump output will be disabled.



**COOLING:** Set point range: 18-30°C. If  $T_{room} > T_{set} + 3^{\circ}\text{C}$  the compressor will run at the max frequency, if  $T_{set} + 1^{\circ}\text{C} < T_{room} < T_{set} + 3^{\circ}\text{C}$  the compressor will adjust the frequency, slowing down to the min value when  $T_{room} = T_{set} + 1^{\circ}\text{C}$  and then stopping when  $T_{room} = T_{set}$ , with the fan keeping running at the speed selected. Min running time of the compressor after start-up is 3 min, except in case of alarms.



**DEHUMIDIFICATION:** The SET point will be selected automatically by the unit, 2°C below the room temperature sensed and recorded immediately after the mode activation. The fan will run exclusively at the min speed. When reaching the set point temperature, the compressor will stop.



**AUTO:** in such case the unit will decide automatically the operation mode, based on the ambient temperature. Default setting is 23 °C and it can be varied manually by  $\pm 3^{\circ}\text{C}$  and the fan speed can be varied manually unless selecting AUTO fan speed as well, in such case the unit operation will be totally automatic.



**HEATING:** Set point range: 18-30°C. If  $T_{\text{room}} < T_{\text{set}} - 3^{\circ}\text{C}$  the compressor will run at the max frequency, if  $T_{\text{set}} - 3 < T_{\text{room}} < T_{\text{set}} - 1^{\circ}\text{C}$  the compressor will adjust the frequency slowing down to the min value when  $T_{\text{room}} = T_{\text{set}} - 1^{\circ}\text{C}$  and then stopping when  $T_{\text{room}} = T_{\text{set}}$ . The fan after the compressor start-up will start running as well provided the air is warm enough. Min running time of the compressor after start-up is 3 min, except in case of alarms.

## 7.2. FAN SPEED

The fan speed selectable in heating or cooling mode is associated to the compressor frequency; if selecting the minimum fan speed (ECO) the compressor frequency will be limited to the minimum value, if selecting the medium fan speed the compressor frequency will not overcome the medium value, while if selecting the max fan speed the compressor frequency will be allowed to reach the max value depending on the gap between the room temperature and the setpoint temperature, as explained in the paragraph 7.1.



If selecting AUTO the speed of the fan will be adjusted automatically based on the gap between the room temperature and the setpoint temperature.



The ECO function can be activated by this button, limiting the fan speed and the compressor frequency to the minimum established values, thus minimizing the power consumption of the unit.

## 7.3. TEMPERATURE SET POINT

The temperature set point can be modified by pressing + or – buttons. When the temperature value is blinking it can be increased by pressing + or decreased by pressing - button. The new value will be automatically downloading after blinking for a few seconds.

Note that the value usually shown on display is the real room temperature, while the set point value will be displayed only by pressing once one of the buttons + or -.



## 7.4. SLEEP MODE



The sleep mode is activated by pressing the button and the fan speed will be switched automatically to min (ECO).

In cooling mode, the set point temperature will be raised by 1°C automatically 1 hour after the sleep mode activation. After 2 hours the set point will be further raised by 1°C and then maintained for the next 6 hours operation.

In heating mode, the set point temperature will be decreased by 2°C automatically 1 hour after the sleep mode activation. After 2 hours the set point will be further decreased by 2°C and then maintained for the next 6 hours operation.

## 7.5. TIMER FUNCTION



This function is activated by pressing the clock icon.

When the unit is ON, the Timer OFF can be set by pressing the timer symbol and the relative stop time will start blinking in the temperature field, showing first the value 1 (i.e., the unit will stop after 1 h), by pressing + or - buttons the value can be increased or decreased. Then by pressing the timer symbol again the setting will be confirmed starting the countdown.


By pressing again the timer symbol the setting will be erased.

When the unit is OFF (stand-by), the Timer ON can be set by pressing the timer symbol and the relative stop time will start blinking in the temperature field, showing first the value 1 (i.e., the unit will start after 1 h), by pressing + or - buttons the value can be increased or decreased. Then by pressing the timer symbol again the setting will be confirmed starting the countdown.

By pressing again the timer symbol the setting will be erased.

## 7.6. SETTINGS


The setting menu will appear by pressing and holding the fan speed button for at least 5 seconds. The current choices will be shown in the first page:

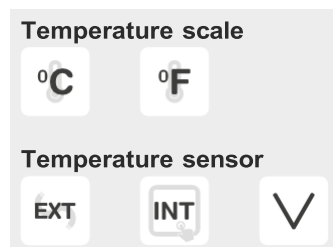

- Temperature unit °C or °F
- Temperature sensor external (probe located in the air suction section or temperature sensor internal (probe located inside the display)

The selected buttons will be highlighted.


In the next pages the following parameters are available:

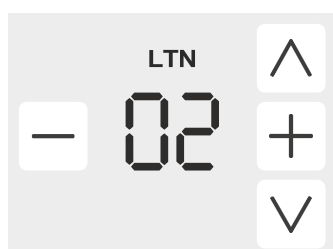

- Ltn (display backlight duration in seconds) with setting range 10-99, default value 60



- Buzzer activated / disabled

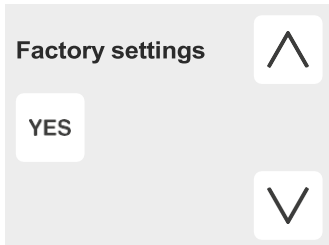

- Def (default settings restore) setting and exit page

## 7.7. ALARMS

Alarms codes will be displayed in yellow colour.

E1: Room temperature: sensor failure  
E2: Evaporator coil temperature: sensor failure  
E4: Condenser temperature: sensor failure  
E5: DC Fan motor failure  
E6: Communication error between Main MCU and display  
E7: Communication error between Main MCU and SSPM  
E8: Compressor discharge temperature: sensor failure  
LT: Low outdoor coil temperature in heating mode  
LP: Low pressure alarm  
HP/04: High pressure alarm  
01: Voltage too high  
02: Voltage too low

Other numbers in yellow without E, are related to the driver board faults.

HP alarm in cooling mode could be due to clogged seawater circuit or malfunctioning of the seawater pump. It is recommended to check first the seawater flow from the overboard discharge. HP alarm in heating mode may be related to insufficient airflow through the finned heat exchanger.

## 7.8. VERSION E (EVOLUTION) ALARMS AND TOUCH SCREEN DISPLAY 2.4", 3.5"

### 7.8.1 Alarm List

E0: Main MCU Communication Error  
E1: Temperature Sensor (RT) Error  
E2: Temperature Sensor (IPT) Error  
E3: Temperature Sensor (OPT) Error  
E4: Fan Blower Fault  
E6: Driver PCB - Main MCU Communication Error  
E7: Temperature Sensor (OT) Error  
E8: OPT Temperature Too Low  
E9: Low LP Gas Pressure  
E10: High HP Gas Pressure  
E16: On/Off Enable from Remote Switch





E18: Compressor Block  
E19: Driver Temperature Sensor Error  
E20: Driver Temperature Too High  
E21: Input Voltage fast decreasing  
E22: Input Voltage High  
E23: Output Out of Phase  
E24: Input Out of Phase  
E25: Software Overcurrent/Overload  
E26: Communication Failure  
E27: Bus Imbalance  
E28: Input Voltage Too Low  
E32: Current Detection Circuit Error


#### ALARM RESET

After resolving the issues that triggered the alarm, it can be reset without shutting down the unit. To reset the alarm, turn the unit off using the display and then turn it back on


#### 7.8.2 DISPLAY 2.4"




SETTINGS: Access the settings menu by pressing the settings button and entering the default password: 1111

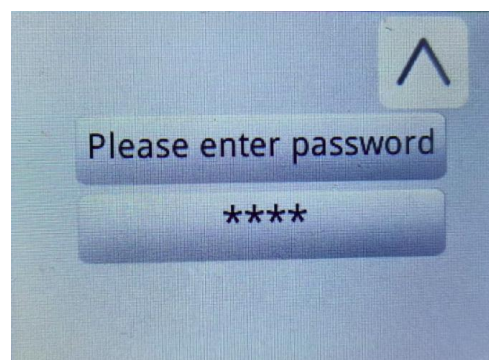

From the settings menu you can: Set the temperature unit to °C or °F, Choose the temperature sensor: External Sensor: Located in the air suction section, Internal Sensor: Located inside the display.

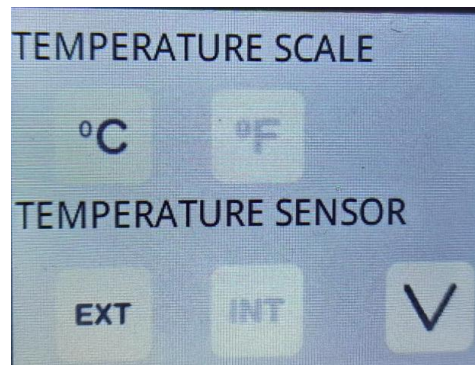

From the setting menu you can view the real-time temperature readings from the sensors

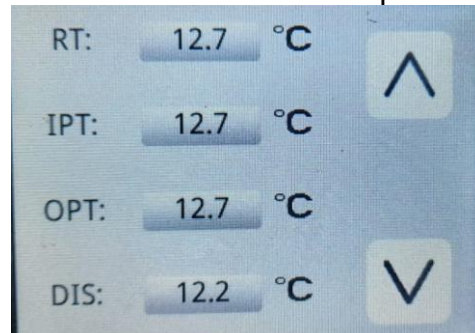

Use the Mode button to select the operational mode: cooling / heating / dehumidifying / auto/fan.

Additional function of the Mode button: with the unit OFF (stand-by), by pressing and holding 15 s the MODE button, the pump output will be activated, and the following icon will be displayed: This function is useful during the installation in order to prime the pump and fill the sweater circuit before starting the compressor. By pressing again the MODE button, the pump output will be disabled.







### 7.8.3 DISPLAY 3.5" (optional)







Mode: cool, heat, dehumidification, AUTO, FAN  
Speed: max, medium, ECO, AUTO

From the settings menu you can: Set the temperature unit to °C or °F, Choose the temperature sensor: External Sensor: Located in the air suction section, Internal Sensor: Located inside the display.

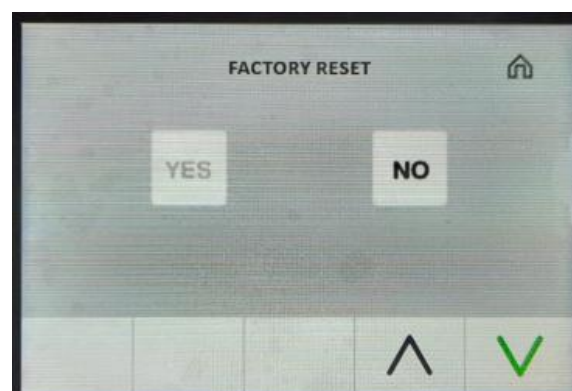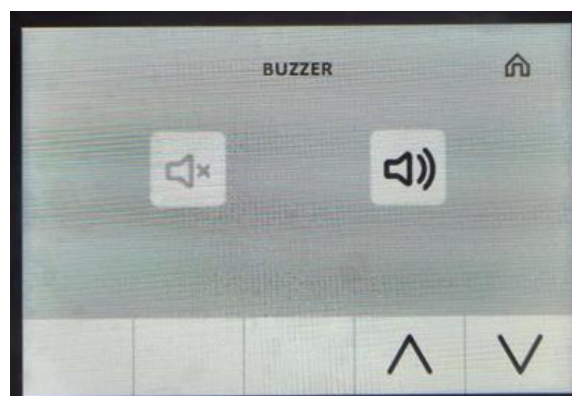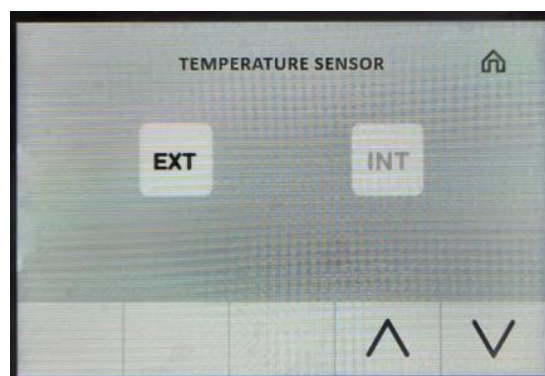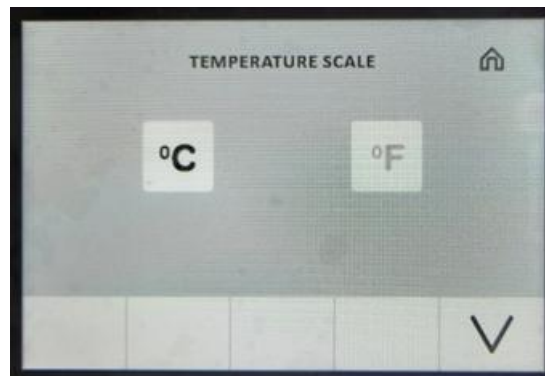


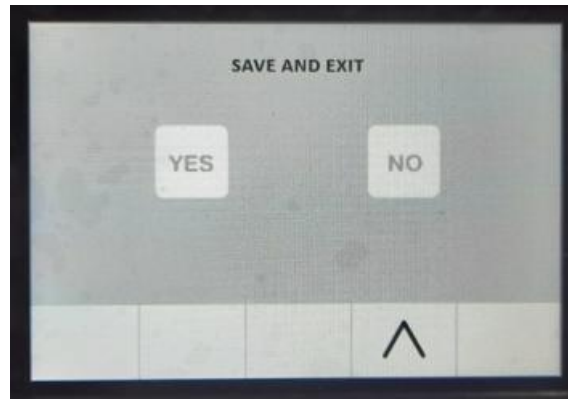


Additional function of the SETTING button: by pressing and holding 5 s the SETTING button, the following pages will be shown:

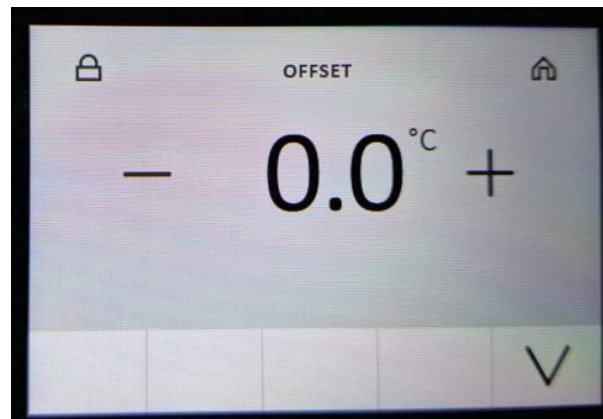

Temperature sensor calibration

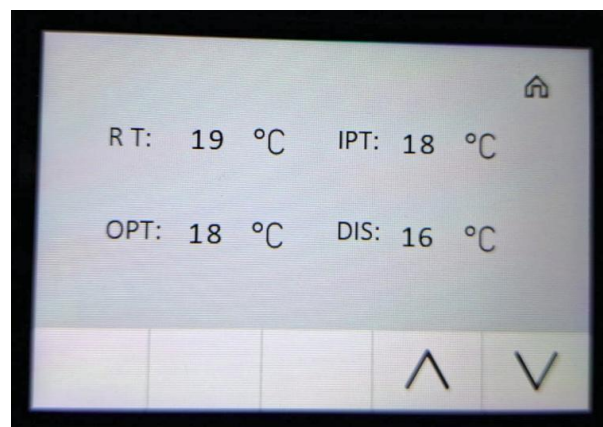

Real-time temperature readings from the sensors

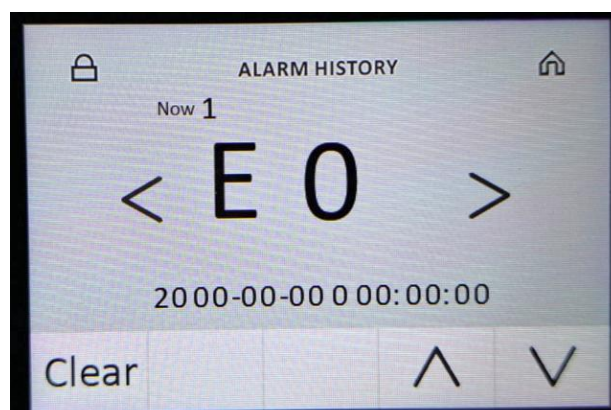


Alarm history





Additional function of the Mode button: with the unit OFF (stand-by), by pressing and holding 15 s the MODE button, the pump output will be activated, and the following icon will be displayed:

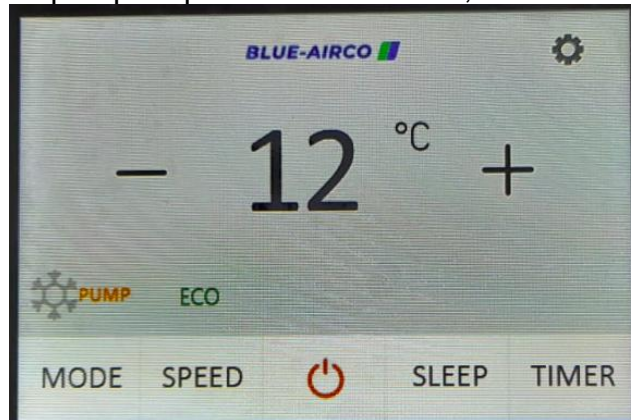

This function is useful during the installation in order to prime the pump and fill the sweater circuit before starting the compressor. By pressing again the MODE button, the pump output will be disabled.

## 8.0 WARRANTY TERMS

### 8.1. LIMITED WARRANTY:

The manufacturer has tested each unit before delivery and guarantees that all the products are free from defects in materials or workmanship.

Warranty is limited in term of duration as specified below.

This Limited Warranty totally replaces any other express warranties, obligations, or liabilities from



the manufacturer (i.e. Blue-Airco Srl) side. In those instances, in which the manufacturer chooses to make a cash refund of the original purchase price, such refund shall affect the cancellation of the contract of sale without reservation of rights on the part of the owner. Such refund shall constitute full and final satisfaction of all claims which the owner has or may have against the manufacturer resulting from any actual or alleged breach of warranty, either express or implied.

The manufacturer disclaims any liability for either incidental or consequential damages. This includes any damage to another product or products resulting from such a defect. Any implied warranties of merchantability, satisfactory quality or fitness for any purpose is limited to the duration of this limited warranty.

The manufacturer does not authorize the dealer or any other person to assume for him any liability in connection with the warranty, or any liability or expense incurred in the replacement or repair of its products other than those expressly authorized by him. The manufacturer shall not be responsible for any liability or expense except as is specifically authorized in the following sections.

The manufacturer reserves the right to improve or modify the products without notice.

## 8.2. WARRANTY DURATION:

The Blue-Airco product's Warranty Coverage Period is 2 years and it begins from the date of possession of the boat by the original owner or from the date of the first installation. However, the Warranty Coverage Period will not exceed 3 years from date of manufacturing. The Warranty is transferable and will carry any remaining Warranty Coverage Period. The Warranty Coverage Period does not restart after any repair or replacement of the product.

All the Blue-Airco products bear a data plate showing the product model and serial numbers. The serial number is related to the production date (date-coded) To determine whether any product is covered by Warranty, please send a picture of the data plate to the customer service.

For proof of the date of the initial installation, the manufacturer will require a copy of the bill of sale from the dealer to the original owner.

- **Self-contained units:** If any part of the product fails due to a manufacturing defect within 24 months from the date of possession of the boat by the first owner, the manufacturer will supply without charge the required replacement part. The service labour will be covered as well within 12 months from the data of possession of the boat by the first owner, provided the conditions specified in the following chapter are fulfilled.
- **Pumps:** If any pump fails due to a manufacturing defect within 12 months from the date of original shipment Blue-Airco will replace or repair the part without charge. The service labour will be covered as well provided the conditions specified in the following chapter are fulfilled. Pumps damaged that have been submerged or run dry are not covered by warranty.
- **After market:** For replacement parts and components the warranty duration is 90 days, the labour is not cover.





### 8.3. WARRANTY CONDITIONS:

In case of defective products, the intervention must be prior authorized by the Customer Service; therefore, the client shall write by email to [info@blue-airco.com](mailto:info@blue-airco.com) requiring the intervention. All the parts delivered bear a data plate reporting model and serial number, it is recommended therefore to attach pictures of parts and data plate to the email. A copy of the bill of sale of the equipment or a copy of the bill of sale showing the first date of boat possession by the owner can be required as a proof of the startup date of the equipment.

The owner shall provide the Customer Service with all the information related to the failure.

The intervention must be carried out by a local service authorized by Blue-Airco Srl. In case there is no authorized service dealer in that particular area, Blue-Airco will authorize the use of a local service company and will assist in any way possible.

Where labour is included for a particular product covered under this Limited Warranty, Blue-Airco is not responsible for additional labour charges associated with the removal, reinstallation, or replacement of any equipment or furnishings beyond the particular covered product. This Blue-Airco Limited Warranty allows up to 1 hour time for the Servicing Dealer's travel. Any additional travel time is the owner's sole responsibility. The labour eventually necessary to remove other parts and equipment to access to the faulty unit in order to start repairing, will be at owner's charge.

Any unit or replacement part installed due to a warranty failure carries the remainder of the original warranty. Warranty coverage does not start over from the repair/replacement date.

If the intervention onboard is required but the problem is due to improper installation and use, or any cause independent from the supplied equipment, the cost of intervention will be at owner's charge. The installation of the products is not covered by the Blue-Airco warranty, because the manufacturer has no control or authority over the selection, location, application, or installation of these components.

The responsibility of the owner of the equipment includes the following:

- To run the equipment according to the manufacturer's instructions.
- To provide an easy access for service.
- To check and reset circuit breakers and disconnect the electric power before calling for service.
- To keep the units clean and free of dirt, to keep the air filters clean.
- To keep the condenser coil free of sediment and scale.
- To keep clean the seawater circuit.
- To pay the charges incurred when any of the above has not been done.
- To pay for repair or replacement of any material or part, other than those provided by Blue-Airco.
- To check any protective device on the circuit board and replace if required.
- To ensure that the unit is correctly connected to the ground and the bonding system.

This warranty does not cover:

- Failures and damages resulting from improper or faulty installation, abuse, misuse of the equipment, installation that does not comply with the manufacturer instructions or otherwise,



installation that does not comply with boat standards ABYC;

- Damages caused by natural disasters, flooding, fire, submerge, water leakage.
- Transport: product damage as a result of improper return packaging or other freight damage.
- Negligent servicing.
- Wrong electrical and hydraulic connections.
- Power supply not in according to manufacturer's specifications.
- Coil damaged due to water frosting, failures due to improper winterization.
- Exterior corrosion, electrolysis and galvanism, stray current, seawater erosion.
- Water damage, including specifically to the following components: pumps, blowers, PCB and display.
- Additional labour charges associated with the removal, reinstallation, or replacement of any equipment or furnishings beyond the particular covered product.
- Pumps with cracked heads or pumps that have been run dry, or have been submerged.
- PCB and display with water damage.
- Environmental and/or recovery fees.
- Damages occurring as a result of normal wear or aging.
- Replacement of refrigerant with substitute without the manufacturer preauthorization.
- Welding and Nitrogen Fees.

## **9.0 DISPOSAL AND REFRIGERANT FLUID RECOVERY**

Disposal of the equipment and parts must be done according to the local law in force for the different categories of waste and recycling. Refrigerant and oil must be recovered and treated only by authorized and qualified technicians and companies. Please contact the Customer Care ([info@blue-airco.com](mailto:info@blue-airco.com)) for any related question.